

# Easy Guide: Mitsubishi GS Remote

## 1. Turn the Unit ON or OFF

- Press the ON/OFF button (usually large or top button).
- A beep will sound and the screen will light up.

## 2. Set the Temperature

- Use ▲ (up) or ▼ (down) buttons.
- Cooling: 70–74°F | Heating: 68–72°F

## 3. Select a Mode (Press MODE until you see one of these):

- COOL: For cooling on hot days
- HEAT: For warming on cold days
- DRY: Removes moisture on humid days
- FAN: Moves air without heating or cooling
- AUTO: Automatically selects heat or cool

## 4. Adjust the Fan Speed

- Press FAN button to cycle: AUTO, LOW, MED, HIGH
- AUTO is best for most users

## 5. Change Air Direction (Optional)

- Press VANE button to move airflow up/down
- Hold it to swing continuously

## 6. Use the Timer (Optional)

- Press TIMER ON/OFF, then use ▲ or ▼ to set time
- Good for bedtime or wake-up settings

Tips: We suggest that you use HEAT or COOL MODE

- Only use ON/OFF, TEMP, and MODE for basic operation.
- Make sure the remote points at the indoor unit.
- Replace batteries if screen fades or stops working.

# Remote controller

Battery replacement indicator **Page 4**

Signal transmitting section  
 Distance of signal :  
 About 20 ft. (6 m)  
 Beep(s) is (are) heard from  
 the indoor unit when the  
 signal is received.

Temperature  
 buttons

Pages 4, 5, 6

Operation  
 select button

Pages 5, 6

ECONO COOL  
 button

Page 8

SMART SET  
 button

Page 8

OFF/ON

(stop/operate) button

FAN speed control  
 button

Page 7

VANE control  
 button

Page 7

TIME, TIMER set buttons

Pages 4, 8  
 forward button  
 backward button

TIME, WEEKLY TIMER  
 set buttons

Pages 4, 9, 10

RESET button


Page 4

Lid  
 Slide the lid down to  
 open the remote control-  
 ler. Slide it down further  
 to get to the weekly timer  
 buttons

CLOCK button

Page 4

## Remote controller holder

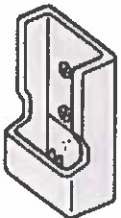

- Install the remote controller holder in a place where the signal can be received by the indoor unit.
- When the remote controller is not used, place it in this holder.

Only use the remote controller provided with the unit.

Do not use other remote controllers. If two or more indoor units are installed in proximity to one another, an indoor unit that is not intended to be operated may respond to the remote controller.

- \* The backlight turns on when using the remote controller. The backlight goes off if the remote controller is not used for a while.